




# SWLLOC Instructions

## INTRODUCTION

The Loud Lock is equipped with an optional vibration activated alarm to prevent tampering. When used in this mode, an alarm sounds for about 10 seconds if the lock senses vibration. Once the alarm stops it will automatically rearm itself and sound again if further vibration is detected.

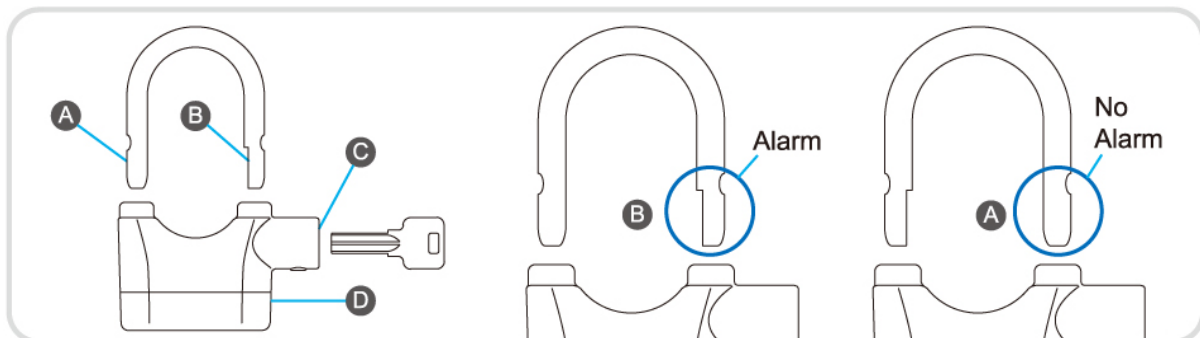

## ACTIVATING THE ALARM

You have the option to use the Loud Lock with or without the alarm function. To use it with the alarm the shackle should be positioned as shown in the second (middle) picture above. It is important to note the keyhole is to the right. Pay careful attention to the end of the shackle (B) marked "alarm" in the diagram. If you don't want to use the alarm turn the shackle around the other way as shown in the third picture.

To activate the alarm, insert the key and turn it 90 degrees (to the horizontal position) then insert the shackle according to the diagram in the middle picture above. Press the shackle down completely until you hear a confirming "beep." Turn the key back up to its original (vertical) position and remove the key. After a short delay the Loud Lock will be armed and will sound immediately when vibration is detected.

## DEACTIVATING THE ALARM

**NOTE:** The Loud Lock will sense the vibration caused by inserting the key and activate the alarm. We recommend covering the bottom of the alarm with your hand to help muffle the sound.

To deactivate the alarm: 1) insert the key 2) turn the key 90 degrees to the horizontal position and 3) remove the shackle.

To use the padlock without the alarm function follow the instructions above but insert the shackle as shown in the third picture above.

## LOW BATTERY WARNING

When the unit beeps continually or the alarm no longer sounds the batteries need to be replaced.

## CHANGING THE BATTERIES

1. Insert the key into the keyhole (C), turn to the horizontal position, and remove the shackle (A).
2. Leave the key in the lock so the alarm function remains deactivated.
3. Loosen the screws inside the lock using a Phillips screwdriver.
4. Remove the battery compartment (D) from the housing.
5. Remove the old batteries and insert 3 new LR44 batteries following the polarity diagram inside the battery compartment.
6. Replace the battery compartment (D).

7. Tighten the screws inside the lock.

## **WARRANTY**

*Cutting Edge Products, Inc.* extends a ONE YEAR warranty to the **SWLLOC** for the product against defects in materials or workmanship, with the following exceptions:

1. The warranty does not cover damage resulting from accident, misuse or abuse, or lack of reasonable care.
2. The warranty will be voided if the unit has been damaged by not following the above instructions.

## **CONDITIONS OF SALE**

The **LOUD LOCK** is designed to activate an alarm when the lock is tampered with. There is no stated or implied guarantee that it will prevent theft or vandalism. As such, the purchase of this product is an agreement by the purchaser/user to hold all sellers and manufacturers harmless of all liabilities and damages.

## **TO OBTAIN SERVICE**

Contact the Authorized Dealer from whom you purchased this unit for a Return Merchandize Authorization. The returned unit must be sent postage prepaid and proof of purchase is required. Damage or loss occurring during shipment is not covered by this warranty.