


# Model JPB97 Instruction Manual

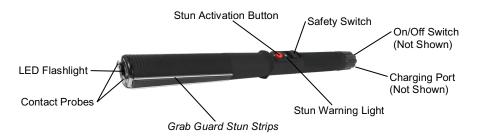

**Warning:** When testing or using the Stun Baton in self-defense do not touch the *Grab Guard Stun* Strips that extend down approximately 5 inches from the top of the unit. When the Stun Activation Button is pressed, these metal strips conduct electricity and will shock you if you come into contact with them

## Recharging

- The rechargeable batteries are already installed. The unit cannot be opened, as this will void the warranty.
- 2. We recommend charging the stun baton before it is used. Simply plug the charging cord into the bottom of the unit and into a standard outlet (AC 110-220V, 50-60 H<sub>2</sub>). A red light near the charging port will come on while the unit is charging. IMPORTANT: do not charge for more than 8 hours at a time. Overcharging can damage the unit and void the warranty. Under normal use the unit will need to be recharged for 8 hours every 60 days. If the LED flashlight is used frequently and becomes dim or if the electrical current becomes noticeably weaker, the unit will need to be recharged.

# Using the Flashlight

- 1. Move the on/off switch on the bottom of the unit to the "ON" position.
- Slide the safety switch up one notch to the middle position and the LED Flashlight will come on
- 3. To turn off the LED Flashlight, slide the safety switch back to the bottom position.


**Testing the Stun Baton (WARNING:** Do not test fire the stun baton for more than 1 second, as this will damage the unit and void the warranty and do not touch the *Grab Guard Stun Strips*. *Although you cannot see the electrical current on the sides*, they **do** conduct electricity and will stun you if touched)


- 1. Slide the on/off switch on the bottom of the unit to the "ON" position.
- Slide the safety switch up two notches to the top position. The red stun warning light will come on to indicate the unit is ready to fire. (Note: The stun feature will not work while the LED Flashlight is on).
- Press the Red Stun Activation Button to test fire the unit. Do not hold the button down for more than 1 second. You will see and hear a charge fire across the top of the unit between

the contact probes. **Important:** Slide the on/off switch to "OFF" when you no longer want the unit to fire.

### Using the Stun Gun in Self Defense

- With the on/off switch in the "on" position and the safety switch in the top position, touch your assailant's body with the Contact Probes at the top of the unit or *Grab Guard Stun Strips* located on both sides and press the Stun Activation Button.
- Touching anywhere on the assailant's body will have an effect. However, the maximum effect is achieved in the areas shown to the right:





#### Effects of the Unit on an Assailant

- Touching an assailant for less than 1 second will cause minor muscle contractions and have a repelling effect.
- Touching an assailant for 1 to 2 seconds will cause muscle spasms and a dazed mental state.
- 3. Touching an assailant for 3 to 5 seconds will cause loss of balance and muscle control, total mental confusion, and disorientation. All effects to the assailant are temporary; the stun baton can cause no permanent harm. (NOTE: The device should not be used for longer than 5 seconds.)

**WARRANTY: Cutting Edge Products** extends a lifetime warranty to the **JPB97** for the product against defects in materials or workmanship, with the following exceptions:

- The warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, moisture, the affixing of any attachment not provided with the product, loss of parts, or recharging the unit in any manner not in accordance with the included instructions.
- 2. The warranty will be voided if the unit has been opened or tampered with in any way (unless by an authorized dealer) or if any unauthorized replacement parts have been used.

**NOTICE:** Purchaser must check and abide by all local laws governing the possession and use of stun guns. In addition, the stun gun must only be used in a lawful manner for self-defense. NOTE: Not to be used on children, persons with heart disease, or any vital part of the human body. Not to be stored or used in environments where it is damp or humid or where there are extreme hot or cold temperatures. Do not use on metal objects.

**Conditions of Sale:** Purchase of this product is an agreement by the purchaser/user to hold all sellers and manufacturers harmless of all liabilities and damages.

**To Obtain Service:** Contact the Authorized Dealer from whom you purchased this unit for a Return Merchandise Authorization. The return unit must be sent postage prepaid and proof of purchase is required. Damage or loss occurring during shipment is not covered by this warranty.

UPPER SHOULDER

UPPER

BELOW